

SAFETY WARNINGS

Do not drive with rear door in open position

1

Never transport passengers in truck bed

2

Do not occupy while vehicle is running

3



4

If using a rack system, refer to your vehicle's owner's manual for the Gross Vehicle Weight Rating (GVWR) and safety information.



A.R.E. TRUCK CAPS

A.R.E. TRUCK CAPS



A.R.E.
P.O. Box 1100
Massillon Ohio 44648
1.800.649.4ARE • 1.330.830.7878
Fax: 1.330.830.7848
Web Site: www.4ARE.com
E-mail: topline@4ARE.com

**Z, CX, MX, TW,
V, DCU Series**

ADDITIONAL INFORMATION


For care and maintenance information, for warranty information, and for warranty registration, please consult your warranty and care instruction flyer, or visit www.4are.com

Form # 490 4/08

A.R.E. Part Number 17999




REMOVAL AND REINSTALLATION

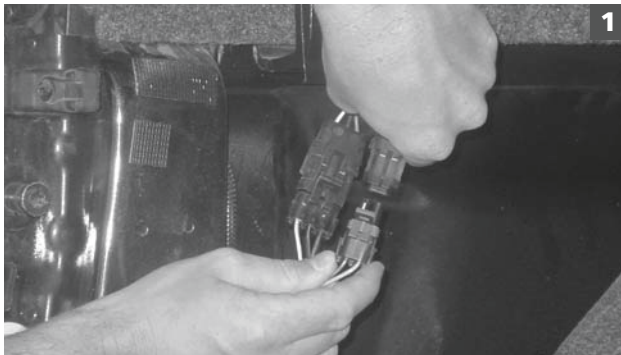

1 Disconnect wire harness.



2 Remove clamps.

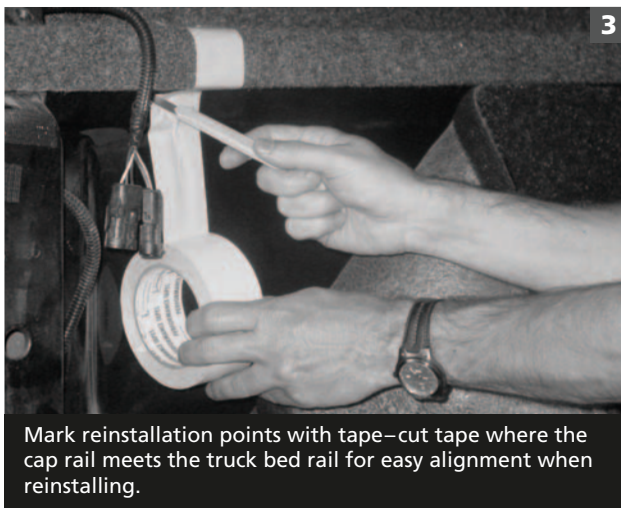

3 Mark reinstallation points with tape—cut tape where the cap rail meets the truck bed rail for easy alignment when reinstalling.



4 Remove cap from truck.



5 Place cap on level ground, elevating with wood blocks while not in use.

NOTE: While the cap is off, check the cap tape to make sure that it is in good condition. If not, contact your local A.R.E. dealer to order replacement tape.



1 Place cap onto truck bed rails (see removal NOTE: step 5).

2 Line up reinstallation points (see removal step 3).

3 Reconnect wire harness.

4 Loosely assemble clamp jaw system.

5 Reinstall mounting clamps. Do not overtighten clamps, which could cause damage to your truck bed.

